


# RECURVE CROSSBOW


## INSTRUCTION MANUAL

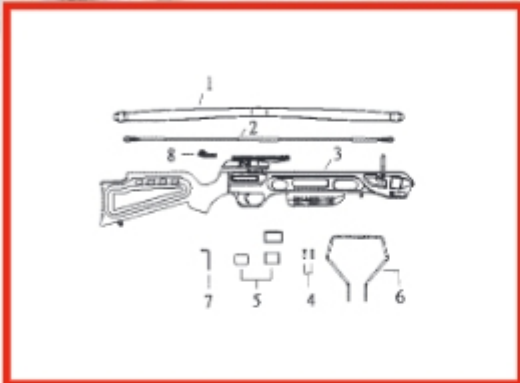

### The Crossbow Includes:


- |                    |                                     |
|--------------------|-------------------------------------|
| 1. Fiberglass Limb | 5. Press Pads                       |
| 2. String          | 6. Foot Stirrup                     |
| 3. Crossbow Body   | 7. Allen Wrench                     |
| 4. Mounting Screws | 8. Peep Sight/ Red Sight( optional) |

**Screw Driver Needed for Assembly Not Included**

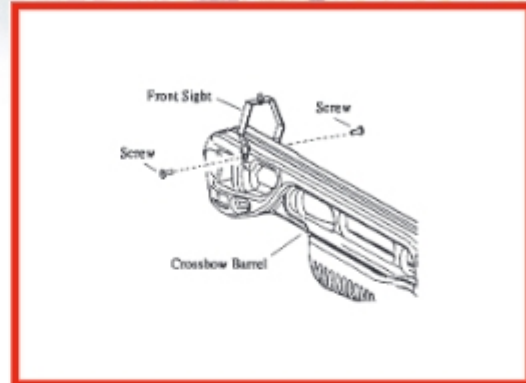

### Step 1.

With a screw driver , attach sight.

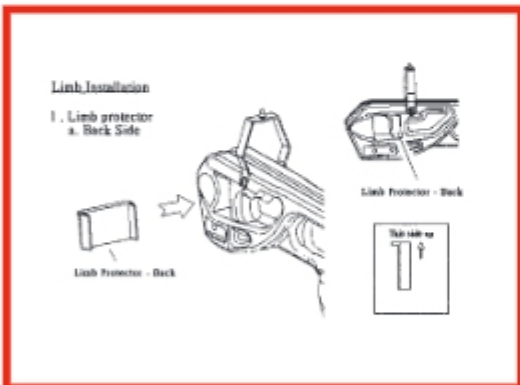


### Step 2.

Insert the assembled press pads in the front of the barrel.


### Step 3.

Assemble the press pads.

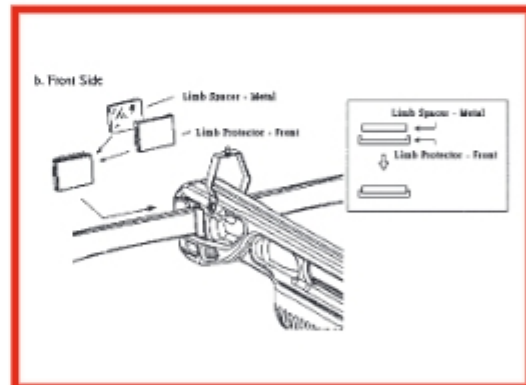


### Step 4.

Load the limb properly through the front of the barrel.

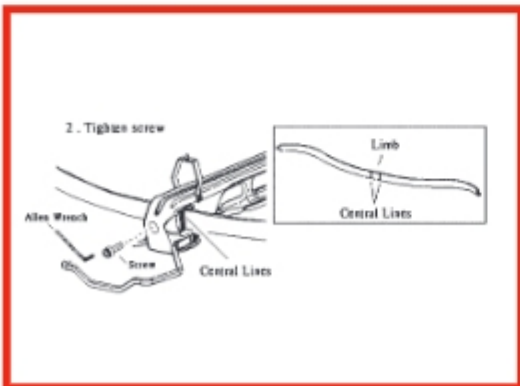

### Step 5.

When the limb and press pads has been correctly installed, secure both parts with the screw in front of the barrel and tighten securely with Allen key.

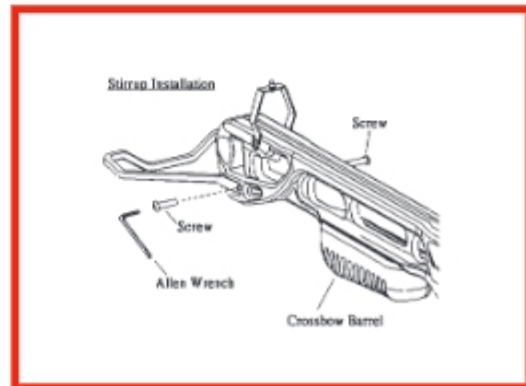


### Step 6.

Put the gap side of the foot stirrup in to the hexagon holes provided in the front of the bow unit, tighten the screws with Allen key. Make sure that the foot stirrup is secured before cocking the bow for your own safety.


# RECURVE CROSSBOW

## INSTRUCTION MANUAL

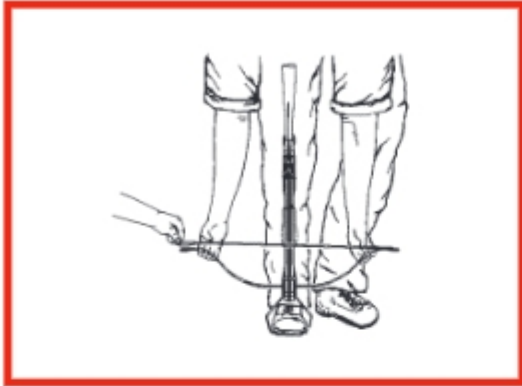

### Step 7.

Please Refer to Instruction Manual 1B to Install String.

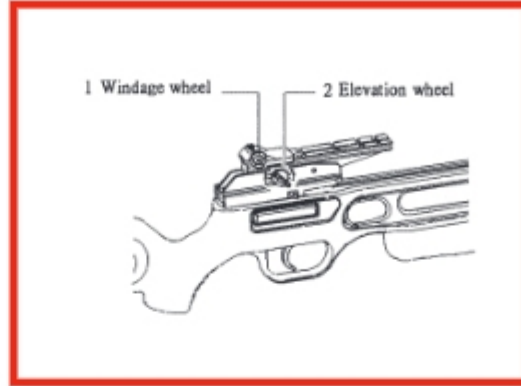


### Step 8.

Slide the peep sight into the rail mount.

### Step 9.

When bolt striking high, adjust the elevation wheel counter-clockwise. When bolt striking low, adjust the elevation wheel clockwise. Please use the same method for left and right on the windage wheel.

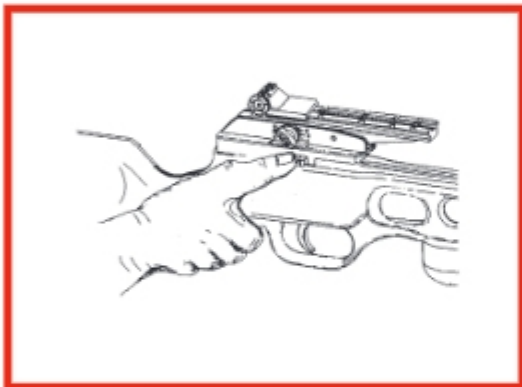

### Step 10.

The safety lever is automatically engaged when the string is properly cocked in the safe position.

### Step 11.

Switch to fire position when you intend to shoot.



### Figure 12.

Place your foot securely through the foot stirrup. Reach over the top of the stock and grasp the string with equally power on each hand next to both sides of the barrel. Pull the string back by standing straight until you hear a click in the trigger mechanism. The safety switch should be closed automatically. Keeping a firm hold on the string, let down slowly until you are sure that the string is held securely by the release mechanism.

### For your safety:

Do not aim at anything, cock or load your crossbow until you intend to shoot.

You should only shoot with proper bolts.

Never dry fire the crossbow as it could damage the crossbow. Using an underweight bolt could simulate a dry fire.

Discontinue use if the crossbow becomes damaged.

Always use the proper spine and mass weight bolts for your crossbow.

This crossbow is to be used with a qualified archer or contact a qualified archery dealer.

It is recommended to lube wax your string every 5-10 shots and replace your string at least once every year or if it becomes frayed.

### Caution:

Not a toy adult supervision required. Misuse or careless use may cause serious injury .

Effective shooting range could by up to 1.10 yards


This is a high power crossbow intended to be used by those who are 18 or over 18 years of age.

Please read all the instructions carefully before using.

Purchasers and users should confirm to government laws and the restriction to the ownership of crossbow.


## 中弓上絃說明

1. 將輔助繩斜套在弓臂上至正確位置  
Put the auxiliary rope oblique on the limb tip.  
tip.

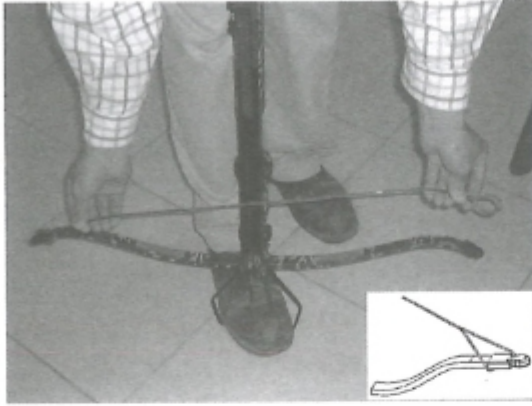


2. 兩手平均施力將輔助繩拉到絃線卡榫, 並保持腳踏環朝地上。  
Pull the rope into the trigger mechanism equally by both hand and keep the foot stirrup on the ground.

Pull the rope into the trigger mechanism equally by both hand and keep the foot stirrup on the ground.

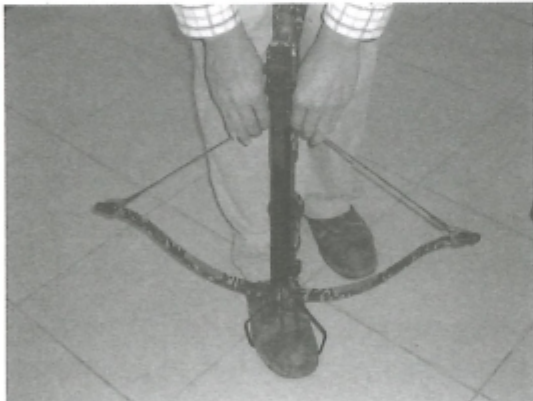


3. 將絃線穿過輔助繩, 確實套牢在弓臂套上。  
To fit the string loop firmly on the limb tip through the rope.

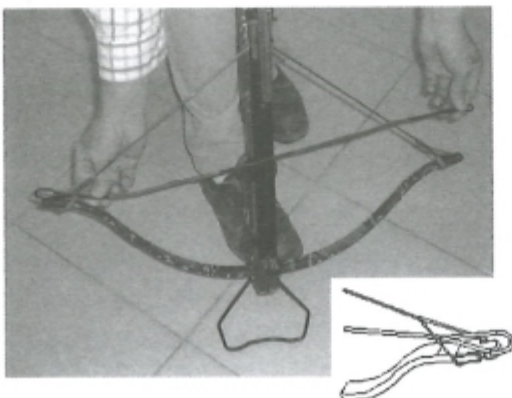

## STRING INSTALL

4. 打開保險到“FIRE”位置  
Switch the safety to “FIRE” position.

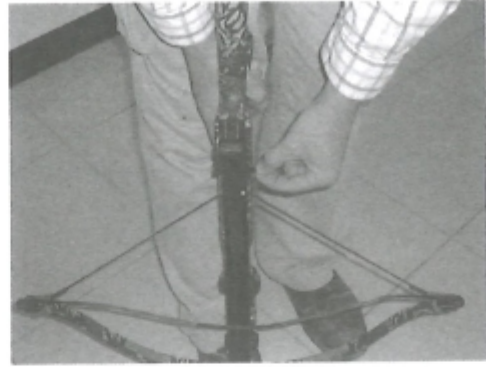

5. 腳踏環朝下與地面垂直後扣板機射擊。  
Make sure the foot stirrup is on the floor and shoot.



6. 將輔助繩取下即完成絃線安裝。  
The string install is completed after the rope takes off.



※所附上之輔助繩為安裝絃線專用, 請勿當作絃線射擊使用, 以免發生危險。

Do not use the auxiliary rope to shoot. Any misuse or careless use may cause serious injury.